

## 8. Repair

- 8.1 Repairs may only be carried out in authorized repair workshops by expert persons (Ask your local dealer for further informations).
- 8.2 Only original spare parts must be used. The materials have been adapted to the gas type in each instance. So always specify the gas type.
- 8.3 In case of independent repairs, the use of non-original spare parts or changes on the side of the user or a third party without the approval of the manufacturer, any form of liability for resulting damages will expire as well as the manufacturers warranty.
- 8.4 After being repaired, the pressure regulator must be checked with respect to proper function, leak-tightness and cleanliness of the gas-wetted surfaces. When the system is used again, a sufficient purging operation must be carried out first.

# Instructions for use

## Pressure control panel BT 2000-2L





## Contents

	page
1. Application	
1.1 Designated use	1
1.2 Non-designated use	1
1.3 Technical data	2
1.4 Labeling	2
2. Safety instructions	3
3. Installation	4
4. Start-up	6
5. Shut-down	7
6. Operation, maintenance and storage	7
7. Repairs	8






## 1. Application

### 1.1 Designated use

-  Use the pressure control panel for compressed gases or liquefied gases. The pressure control panel reduces an inlet pressure to an as constant as possible outlet pressure.
-  This equipment can be used in explosion endangered areas because they don't have an own potential source of ignition (ignition risk assessment according to DIN EN 13463-1).

### 1.2 Non-designated use

-  Do not use the pressure control panel for gases in the liquid phase.
-  Do not use unsuitable gas types or corrosive gases.
-  Do not use the pressure control panel at temperatures below -30°C or above +60°C!

***The system has to be used according to these instructions for use and especially the safety instructions!***

### 1.3 Technical data

<b>SPECTROTEC</b>	<b>BT 2000-2L</b>
<b>Inlet pressure P<sub>v</sub>:</b>	max. 300 bar
<b>Outlet pressure P<sub>H</sub>,</b>	
adjustable depending on type up to	10 / 20 / 50 bar
<b>Materials:</b>	
Body:	Brass
Diaphragm:	EPDM
Seat valve:	PA 11
Mounting plate:	Steel, zinc plated
<b>Weight:</b>	
BT 2000-2L:	7,5 kg
Extension:	1,1 kg
<b>Connections panel:</b>	Inlet: G ½"
	Outlet: ¼"-18 NPT
<b>Connections extension:</b>	Inlet: G ½"
	Outlet: ¼"-18 NPT

Oxygen Inlet pressure [bar]	Flow rate (Vn) [m³/h] at outlet pressure (P) [bar]				
	1	2,5	4	10	20
40	15	30	40	50	60
20	15	20	25	30	--
10	15	15	15	--	--
5	10	10	10	--	--


This control panel complies with the latest standards DIN/EN/ISO 7291  
For special configurations these standards are observed accordingly.

For other gases this flow rate will be multiplied with the following factors:

Nitrogen	1,05
Hydrogen	4,00
Argon	0,90
Carbon dioxide	0,85


### 1.4 Labelling

On the mounting plate of the pressure control panel name plate (pos.2) is attached with the following data:

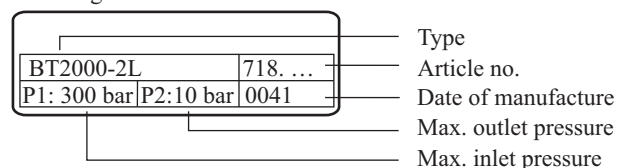

### Test label

All pressure control panels are subject to a functional and leak test. After the test procedure a test label is attached to the back of the mounting plate (pos.3) of each pressure control panel.



## 5. Shut-down

- 5.1 Close all cylinder valves. Close all other valves.
- 5.2 Close low pressure (line) shut-off valve (where applicable).
- 5.3 Open the waste gas valves (5) and close again (depressurise system).
- 5.4 For starting up the pressure control panel again refer to chapter 4.

## 6. Operation, maintenance and storage

- 6.1 Always protect the pressure control panel against damage (check in regular intervals).
- 6.2 Adjustment of the relief valve on the pressure regulator must not be altered!
- 6.3 Ensure perfect condition of seals, sealing surfaces and pressure gauges.
- 6.4 In case of malfunctions - such as a rise in the outlet pressure while the flow rate is zero, leakage to the ambient air, defective pressure gauges or an opening of the relief valve - immediately shut down the system and close the gas cylinder valves.
- 6.5 Before disconnecting the pressure regulator from the pressure control panel ensure that all pressure gauges show zero.
- 6.6 General operating conditions, transport and storage

Transport and storage:	-30°C up to 60°C
Atmospheric conditions:	rel. humidity: 50 % at 40°C 90 % at 20°C

Environment: Environment free from unusual amounts of dust, acids, caustic gases or substances like smoke, vapour, oil vapour, etc.  
Note: The operation of pressure control panels in extreme weather conditions, especially at the coast, or on board of ships as well as vibrations or shocks impair the functional safety and are to be avoided.

Conditions differing from those described above may be agreed upon between manufacturer and user.

## 4. Start-up

Especially for the use with flammable gases the complete system (including the pipework) and all connections have to be checked for leak-tightness before start-up.

In general - but especially for filling the downstream installation the process gas valves must be opened gradually ensuring that any (audible) vibration of the pressure regulator is avoided.

- 4.1 Before starting work read this manual thoroughly and observe it accordingly. Check if the pressure control panel is labeled for the relevant gas type.
- 4.2 Ensure that the waste gas valves (5) are closed (red window visible).
- 4.3 Gradually open the cylinder valves.
- 4.4 Turn the lever (6) on the right pressure regulator anti-clockwise until the arrow points to the left.
- 4.5 Start the gas withdrawal from the left cylinder.
- 4.6 When the left cylinder delivery pressure drops to the switch-over value, the pressure control panel automatically switches to the right cylinder.
- 4.7 Turn the lever (6) on the right pressure regulator clockwise until the arrow points to the right.
- 4.8 Close the left cylinder valve and also the process gas valve.
- 4.9 Open the left waste gas valve (5). Release the pressure from the high pressure hose or the pigtail respectively. Close the left waste gas valve (5) again.
- 4.10 Disconnect the left cylinder from the hose/pigtail and replace and connect the gas cylinder.
- 4.11 Gradually open the left cylinder valve and the process gas valve.
- 4.12 When the right cylinder delivery pressure drops to the switch-over value, the pressure control panel automatically switches to the left cylinder.
- 4.13 Turn the lever (7) on the right pressure regulator anti-clockwise until the arrow points to the left.
- 4.14 Close the right cylinder valve and the process gas valve.
- 4.15 Open the right waste gas valve (7). Release the pressure from the high pressure hose or the pigtail respectively. Close the right waste gas valve (7) again.
- 4.16 Disconnect the right cylinder from the hose/pigtail and replace and connect the gas cylinder.
- 4.17 Gradually open the right cylinder valve and process gas valve.

## 2. Safety instructions

- 2.1 All items of informations marked with ▲ are valid as special safety instructions.
- 2.2 This pressure control panel adhere to state-of-the-art technology and to the demands of the existing standards and regulations.
- 2.3 Changes or modifications are not allowed to be made to the pressure control panel without the prior consent of the manufacturer.
- 2.4 The equipment must be operated by suitable trained personnel only.
- 2.5 The result of improper handling and improper use as intended can involve risks for the user and other persons as well as damage to the device.
- 2.6 Regulations to be adhered to:
  - BGV A1 (VBG 1), "General Specifications"
  - BGV D1 (VBG 15), "Welding, Cutting and Related Procedures"
  - BGV D34 (VBG 21), "Application of liquefied gases"
  - BGV B6 (VBG B6), "Gases"
  - BGV B7 (VBG B7), "Oxygen"
- 2.7 **Special attention has to be paid to the country specific laws, regulations and procedures concerning the use of this type of equipment.**
- 2.8 Use only for gas types the pressure control panel is labelled for (see item 3).
- 2.9 Do not use at temperatures below -30°C or above +60°C.
- 2.9 The valve has always to be opened slowly!
- 2.10 All parts coming into contact with oxygen must be kept in oil-free and grease-free condition.  
**Fire or explosion hazard!**
- 2.11 Smoking or open fire (e.g. candles) in the vicinity of the gas supply system is strictly prohibited.  
**Fire and explosion hazard!**
- 2.12 Do not connect the pressure control panel for tapping points to a gas cylinder.
- 2.13 Protect gas cylinder against falling.




### 3. Installation

#### 3.1 Pressure control panel

- 3.1.1 The installation must only be carried out by expert people who had suitable training especially regarding the safety instructions. This safety training has to be repeated in appropriate time intervals.
- 3.1.2 All parts of the pressure control panel have been subject to a functional and a leak test. All openings are covered. The required seals and labels are part of the scope of supplies. The components are shipped pre-assembled as far as possible.
- 3.1.3 Secure mounting plate (3), extensions (where applicable) and cylinder brackets to the wall with the screws provided.
- 3.1.4 Position the gas cylinders in front of the cylinder brackets and secure them with a safety chain or belt.
- 3.1.5 Check the cylinder valve connections, the high pressure hose connectors and especially if the connection threads and seals are in perfect condition (where required briefly clean connectors using compressed air). Should any thread, seal or sealing surface of the connectors be damaged, **do not** connect and pressurise the system.
- 3.1.6 In configurations without valve arrangement providing the possibility to shut off the entire low pressure pipe system or if the tapping point(s) are located far from the pressure control panel, a shut-off valve is required between pressure regulator and tapping point. The minimum distance between pressure regulator and the shut-off valve should be  $20 \times D_n$  (internal diameter of pipe).
- 3.1.7 Connect the process gas outlet to the down-stream line (line shut-off valve not part of scope of supplies) of the pipe system.
- 3.1.8 For toxic or flammable gases connect waste gas valve outlets and relief valve outlet to a waste gas line. Ensure that the waste gas can be safely disposed of.

#### Pressure control panel BT2000-2L

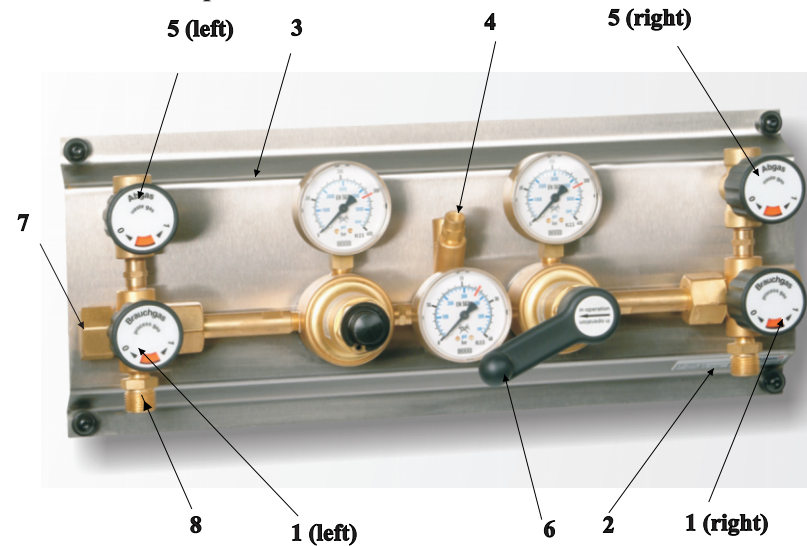

- |                  |                   |
|------------------|-------------------|
| 1 Block valve    | 5 Waste gas valve |
| 2 Name plate     | 6 Lever           |
| 3 Mounting plate | 7 Sealing plug    |
| 4 Relief valve   | 8 Connector       |

#### 3.2. Installation extension (if not pre-assembled)

- 3.2.1 Unscrew the connector (8) from the inlet of the block valve (1) and close inlet of the block valve with sealing plug (7): Apply 5-10 clock-wise windings of PTFE-tape (Teflon-tape, article no. 0321422) to the thread (keep the first thread free from teflon-tape and fix the end of the tape tightly). Then seal the block-valve inlet gas-tight.
- 3.2.2 Unscrew sealing plug (7).
- 3.2.3 Secure mounting plate (3), extensions and cylinder brackets with screws provided to the wall.
- 3.2.4 Position the cylinders in front of the cylinder brackets and secure them with a safety chain or belt.
- 3.2.5 Check the cylinder valve connections, the high pressure hose connectors and especially if the connection threads and seals are in perfect condition (where required briefly clean connectors using compressed air). Should any thread, seal or sealing surface of the connectors be damaged, **do not** connect and pressurise the system.

#### Dimensions Pressure control panel BT2000-2L and extensions

